


nyadinc.
Your Breathing Air Assured!

SERIES 201TS-RD

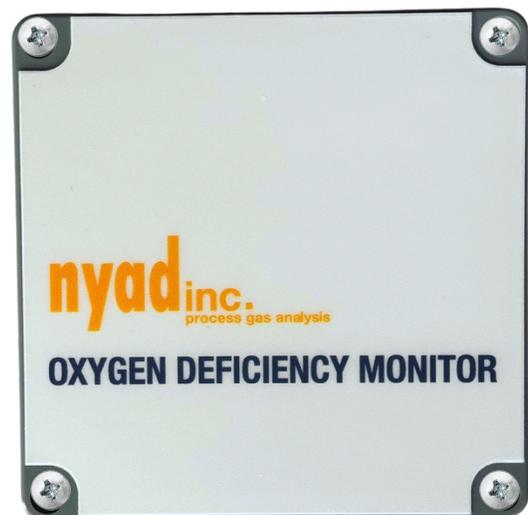

OXYGEN DEFICIENCY MONITOR
OPERATION MANUAL

TABLE OF CONTENTS

SECTION	PAGE
• Introduction	3
• Installation	3
• The Sensor	4
• The Electronics	4
• Startup Routine	5
• Front Panel Controls	6
• Activation "MENU"	8
• Silencing Audible Alarm	8
• Setting Alarm Points	9
• Setting Analog and Digital Outputs	11
• Default Values	13
• Reference Menu	13
• Cal Maint "One Touch Cal" Calibration Procedure	14
• Replacing The O2 Sensor	16
• "Service" O2 Sensor Replacement	17
• Specifications	18
• Troubleshooting Guide	19
• Warranty	20
• Return Policy	21
• Technical Support	22

INTRODUCTION

The O₂ deficiency monitor is a self-contained unit capable of measuring the concentration of room O₂. The range is 0-25% O₂. The O₂ analyzer features two adjustable alarm contacts, analog or digital (optional) output signals with adjustable zero and span values and, a “One Touch Cal” auto-calibration function. This NYAD product offers a remote sensor enclosure. Within that enclosure, a fan is installed that draws room air over the sensor ensuring the sensor is not responding to stagnant air.

INSTALLATION

a) This model comes with 2 enclosures - One for the electronics and one for the sensor. The larger enclosure is to be mounted on the outside of the cylinder storage/use space room and the smaller enclosure is to be installed inside the cylinder storage/use space room. The two enclosures are connected together with a 6' cable that provides power and signal. Enclosures should be at 5' height.

b) Connect the instrument to a power source; 120/220 VAC 50/60 Hz, or 12VDC

c) Turn the POWER switch ON. •

d) The O₂ analyzer will cycle through its diagnostic routine followed by current O₂ concentration value. The analyzer has been factory calibrated but a “bump” test should be performed to ensure accuracy.

QR CODE
FOR
QUICK GUIDE
COMING
SOON

THE SENSOR

The O₂ sensor is an electrochemical cell which has a life expectancy of about 3 years. Since the cell is an electrochemical device which is self-depleting, the cell output will gradually decrease as it is used.

LIFE EXPECTANCY: APPROXIMATELY 6 MONTHS IN CONTAINER
APPROXIMATELY 2 YEARS IN AIR
RECOMMENDED REPLACEMENT INTERVAL EVERY 3 YEARS

THE ELECTRONICS

The NYAD series 201TS-RD Percent Oxygen Deficiency Monitor features an advanced electrochemical sensor. The sensor output is sent to our micro-processor based controller which then provides a digital display of Oxygen in the range of 0- 25%.

The Series 201TS-RD includes two adjustable alarm contacts with panel mounted visual LED's and an enclosure mounted audible alarm as well as 0-5 VDC or 4-20mA output that has user adjustable zero and span. Other signal outputs are also available.

The Series 201TS-RD also includes NYAD's one touch calibration feature allowing the user to easily perform periodic calibrations using certified span gas.

At this point, the processor performs three functions:

- 1) Tests the two adjustable alarm contacts (SPDT relays).
- 2) Verifies Analog or Digital output signals.
- 3) Displays the measured values on a 4-digit LCD display.

Nyad offers two analog outputs:

- 0-5 volt DC or a
- 4-20mA current output

Other analog and digital outputs are available and can be factory set as 0-1VDC, RS232 or RS485. The zero point and span of these outputs are adjustable in the software


STARTUP ROUTINE

After the analyzer has been installed, all electrical connections have been made and power turned on, the instrument will proceed through its power-up routine with the display and indicators stepping through the following sequence:

- a) Displays all segments ON and all LED indicators ON for one second. This step verifies the operation of those devices.
- b) Displays the word NYAD for one second.
- c) The display indicates the version of the current operating system software.

All LED indicators are off followed by INT and O2.

The last step in the startup routine is the display of the current O₂ value. In approximately six seconds, any alarm conditions will be shown on AL1 and/or AL2 red LED alarm indicator and the audible alarm will sound.

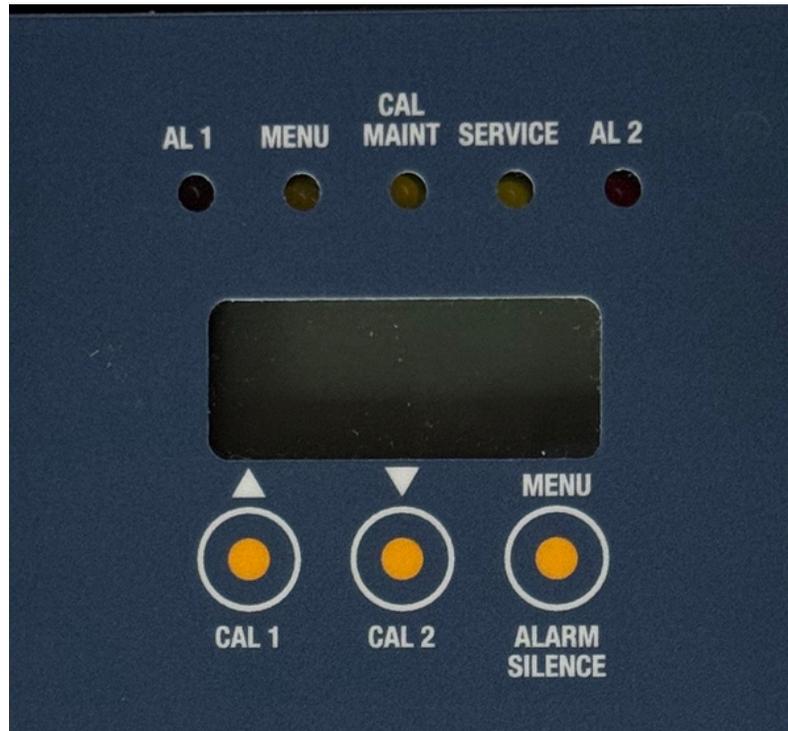

FRONT PANEL CONTROLS

1) UP ▲ / DOWN ▼

- a) Changes the value of set point, outputs, and constants.
- b) Changes the calibration values.
- c) Changes toggle function "Hi and Lo"

2) CAL 1 - This button is used during "One Touch Cal" calibration process using 20.9% O₂ span gas.

3) CAL 2 - This button is used during "One Touch Cal" calibration process using 25% O₂ span gas.

4) MENU - Pressing the MENU button allows the operator to view the current settings. Pressing and holding the MENU button allows the operator to have access, interrogate, and reset the other major functions incorporated into this analyzer, namely, Alarm 1 and 2, Outputs, Toggles, Factory Codes and Calibration settings.

5) ALARM SILENCE - This button is used to temporarily silence the audible alarm. The audible alarm will automatically reactivate in 10 minutes

AL1 Red LED Alarm 1 indicator will illuminate indicating the O2 value has exceeded Alarm 1 set-point value.

MENU Yellow LED indicator

- Solid Yellow - MENU disabled. Available for viewing current settings only
- Slow Blinking Yellow - "ONE TOUCH CAL" enabled. User in calibration mode.
- Fast Blinking Yellow - MENU enabled. User access available.

CAL MAINT Yellow LED indicator will illuminate indicating calibration is required.

SERVICE Yellow LED indicator will illuminate indicating O2 sensor replacement is required.

AL2 Red LED Alarm 2 indicator will illuminate indicating the O2 value has exceeded Alarm 2 set-point value.

ACTIVATION MENU

In normal operations, the MENU button is disabled. The user will only be able to view the current settings set by the factory. To change factory settings such as Alarm 1 and Alarm 2 set-points, Outputs Hi and Lo, the “MENU” must be activated by a Certified Technician

To activate the “MENU”

- 1) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the DOWN arrow button to change the value to 135.
- 2) Press the MENU button to the desired location and use the UP arrow or DOWN arrow button to change settings.

Note: Once changes are made, the display will automatically default in about 10 seconds, flash “O2” and return to the current measure O2 value. Also, once you scroll through the entire menu, the display will automatically default and return to normal operation).



SILENCING AUDIBLE ALARM

To silence the audible alarm, press the “ALARM SILENCE” button once. The audible alarm will be temporarily disabled and will automatically reactivate in 10 minutes.

SETTING ALARM POINTS

This analyzer has two adjustable alarm set points and relays as factory standard. When the measured value of O₂ concentration exceeds the set point for a sustained period of about 6 seconds, the alarm condition will become activated. The SPDT relay (Alarm 1 or Alarm 2) is energized as is the red front-panel LED indicator, AL1 or AL2.

To determine the current setting for ALARM 1, press the MENU button. The display will show AL1 and then default to the current value. If this value is acceptable, the display will automatically default in about 10 seconds and flash "O₂" and return to the current measured O₂ value.

To change ALARM 1 (AL1) set-point the "MENU" must be activated by a Certified Technician.

- a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the DOWN arrow button to change the value to 135.
- b) Press the MENU button, AL1 will momentarily display followed by the current Alarm 1 set-point value. Press the UP arrow or DOWN arrow to change Alarm 1 value.

To change ALARM 2 (AL2) set-point, proceed exactly as described above after pressing the MENU button to display AL2 and its current value.

If the measured value of O₂ concentration is lower or higher than the ALARM 1 or ALARM 2 settings, the corresponding LED will illuminate above the display and energize the alarm relay thus activating any warning devices connected to it.

ALARM TOGGLE POINTS

NYAD Series 201TS-RD Analyzers are equipped with a toggle function (AL1t and AL2t). Set these "Hi" when detecting increasing O₂ and "Lo" when detecting decreasing O₂

- To view the current setting for AL1t, press the MENU button two times.

FACTORY DEFAULTS

AL 1t	Lo
AL 2t	Hi

- The display will show AL1t followed by Hi or Lo.
- Press the MENU button two or more times, AL2t will displayed followed by Hi or Lo.
- If these settings are acceptable, the display will automatically default in about 10 seconds, flash "O₂" and return to the current measured O₂ value.

SETTING ANALOG AND DIGITAL OUTPUTS

The NYAD Series 201TS-RD Analyzer features a 0-5 VDC and 4-20mA analog output as factory standard. This signal is linearly proportional to percent O₂. To view the current output settings:

- a) Press the MENU button five times. “oPHi” will be displayed. The display will then show the O₂ concentration (25 percent default) corresponding to the Hi end (5 VDC) of the analog output scale.
- b) Press the MENU button more one time, the display will now read “oPLo” and then show the O₂ concentration (0 percent default) corresponding to the Lo end (0 VDC) of the analog output scale.

DIGITAL OUTPUT

The NYAD Series 201TS-RD Analyzer features an optional digital output port. The user has a choice of format, either RS-232 or RS-485.

The RS-232 option can be accessed from a standard DB-9 connector located on the bottom of the enclosure or rear panel.

The RS-485 option uses a 25' 3 wire cable Red, Green, Black.

A = Red

B = Green

Ground = Black

To activate the digital output, the “MENU” must be activated by a Certified Technician as described in Section 7.

To change span values from those set at the factory, the “MENU” must be activated by a Certified Technician as described in Section 7. “Activation Menu”.

a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the DOWN arrow button to change the value to 135.

ACTIVATING RS232

- a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the UP arrow button to change the value to 159.
- b) Press the MENU button nine times. The display will show PORT. Press the UP or DOWN arrow and select 0232 (RS232) or 0485 (RS4850). Press the MENU seven times. The display will default back to the current measured LEL value or in about 10 seconds, the display will automatically default, flash "O2" and return to the current measured O2 value.

The digital output is now activated and a constant data stream will be sent every second with the following information:

Data Output format:
\$UNITS, Display_data, Output, ALARM1, ALARM2,
ERROR#1, Line_checksum<CR><LF>

EXAMPLE: \$O2, 1.4, 0.28, 0, 0, 0, 1177<CR><LF>

DEFAULT VALUES

Series 201TS-RD Analyzers are preset at the factory with the following standard values:

- Function %O2
- AI 1 17
- AI 2 23
- Output (oPHi) 25
- Output (oPLo) 0.

These settings can be changed to values most suitable for your application

REFERENCE MENU

AL1	Dry Relay Contact - Alarm 1
AL1t	Toggle Alarm 1 "Hi or Lo"
AL2	Dry Relay Contact - Alarm 2
AL2t	Toggle Alarm 2 "Hi or Lo"
OpHi	Analog Output "Hi"
OpLo	Analog Output "Lo"
CAL 1	Calibration using air or 20.9 O2 Cylinder BAL N2
CAL 2	Not used unless two point calibration required
No O2	Sensor not detecting O2
EroP	Operator Error

CAL MAINTENANCE - "One Touch Cal"

CALIBRATION PROCEDURE

Calibration interval should be carried out regularly per local regulations, NFPA 99 or NFPA 1989 and can be performed by a non-certified technician. The "Cal Maintenance" LED will illuminate indicating calibration is required.

To calibrate the O₂ sensor use a certified sample 20.9% span gas balanced in N₂. The calibration gas concentration can be changed in the menu settings if you are using anything other than 20.9% span gas.

- 1) Attach 20.9% O₂ span gas to the Calibration Port.

Start flow of O₂ cylinder and allow the displayed O₂ value to stabilize to a constant value.

- 2) To activate the "One Touch Cal", press and hold the MENU button for 5 seconds, "CAL" will momentarily display followed by the current O₂ value.

The MENU LED will start blinking.

- 3) Select "One Touch Cal" CAL 1 or CAL 2. The display will show CAL 1 for 20.9%.

The MENU LED will stop blinking and the CAL MAINT LED will now turn off.

- 4) Turn off and remove span gas.

To disable "One Touch Cal" while in calibration mode, press and hold the MENU button for 5 seconds. The MENU LED will stop blinking and the analyzer will momentarily default back to the current measured O₂ value.

CALIBRATING WITH OTHER O2 SPAN GASES:

To use O2 span gases other than 20.9%, the “MENU” must be activated by a Certified Technician.

- a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the UP arrow button to change the value to 159.
- b) Press the MENU button seven times. The display will show CAL1 followed by 20.9.
- c) Change the value to the desired gas value by using the UP arrow or DOWN arrow button.
- d) Press the MENU button nine times, the display will default back to the current measured O2 value or in about 10 seconds, the display will automatically default, flash “O2” and return to the current measured O2 value.

Begin the calibration process using “One Touch Cal” CAL 1 or CAL 2 as described “Calibration Procedure”.

REPLACING THE O2 SENSOR

WE APOLOGIZE FOR ANY INCONVENIENCE
UPDATED REPLACEMENT PROCEDURES COMING SOON
PLEASE CONTACT CUSTOMER SUPPORT FOR IMMEDIATE ASSISTANCE



DANGER

Disconnect power to the unit before performing any
maintenance to the control board



WARNING

The O2 sensor contains corrosive acid. Do not attempt to open. Before
disposing of sensor place it in a polyethylene bag and tie securely. Dispose of
sensor in accordance with all applicable regulations.

“Service” - O2 SENSOR REPLACEMENT

The NYAD O2 sensor should be replaced every three years and should be performed by a Certified Technician. The “Service” LED will illuminate indicating when the O2 sensor replacement is required.

After replacing the O2 sensor, the Service LED indicator must be reset. To reset, the “MENU” must be activated by a Certified Technician.

- a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the UP arrow button to change the value to 159.
- b) Press the MENU button 10 times, the display will show “SSer”. Press the UP arrow button to change the value to 1.
- c) The “Service” LED will now turn off.
- d) The sensor is now ready for calibration.

NOTE: CALIBRATION IS REQUIRED AFTER REPLACING THE O2 SENSOR.

SPECIFICATIONS

MODEL NUMBER		OA-251TS-RD, (NEMA 4),
UNITS		% PERCENT
STANDARD		
	Display	Backlit 4 Digit LCD, 0.5" High
	Alarm	Dual Dry Relay Contacts (SPDT 1A@120V)
	Analog Output	0-5VDC or 4-20mA (Adjustable zero and span)
	Power	120/220VAC 50/60 Hz, 1W Max
	Memory	Non-Volatile Data Memory
	Inlet	1/8" FNPT
	Calibration	"One Touch Cal" Auto Calibration
	Audible Alarm	95 db, frequency 2700 to 3700 Hz
OPTIONS	Digital Output	RS232, RS485
SENSOR		
	Maximum Range	0-25% O ₂
	Signal Output	mv
	Response Time	<15 seconds @ 20°C
	Accuracy Full Scale	± .1 vol O ₂
	Drift % Signal/Year	<5%
	Linearity	± .1%
	Repeatability	±0.5
	Temperature Coefficient	Compensated
	Operation Temperature	-20°C to +50 °C
	Pressure	15 psi
	Humidity	0-99% RH
	Expected Life	36 Months
	Storage Temperature	0 to 20 °C
	Recommended Storage	6 Months
	Warranty	24 Months

ENCLOSURES

	NEMA-4	7.71"W x 7.71"H x 5.71"D
REMOTE SENSOR ENCLOSURE		4.8"W x 4.8" H x 3.5" D

TROUBLESHOOTING

SYMPTOMS	REMEDY
<p>ELECTRONICS</p> <p>Unit will not cycle Startup routine not normal Display is blank with power on Display has missing segments</p>	<p>Please contact NYAD for verbal evaluation. Unit will likely need to be sent to NYAD for further evaluation.</p>
<p>ERROR CODES</p>	
<p>ErOp (Error Operator)</p>	<p>Output out of range. Set output Lo and Hi. See Section 10 Setting Output.</p>
<p>E-Lo</p>	<p>Replace O2 sensor or O2 round electronics.</p>
<p>No O2</p>	<p>Sensor not detecting O2 Gas. Make sure all connections are secure. Replace O2 sensor</p>

WARRANTY

WARRANTY TERMS

NYAD Inc. warrants to the original consumer purchaser that all parts used in the construction or fabrication of the NYAD equipment will be free from defects in materials and factory workmanship under normal use and service for five years from the date of delivery.

Warranty coverage provides the necessary repairs or parts replacement found by NYAD Inc. to be defective due to bad workmanship or faulty materials.

LIMITATIONS OF WARRANTY

NYAD equipment is restricted to inspection (FOB the Factory) before warranty is determined, unless other arrangements have been made by NYAD and the original consumer purchaser.

This warranty does not apply to routine service/maintenance, repairs and routine calibration of the sensor every twelve (12) months in accordance with manufacturer's recommendation, or replacements made necessary by fire or water damage, or accident to or improper installation by others, alteration, misuse or abuse to the NYAD equipment.

This warranty does not cover labor charges or costs incurred for time and expense by other service agencies or personnel involved in maintaining the NYAD Equipment.

Application of this Warranty is further conditioned upon the following:

Installation- The NYAD equipment must be properly installed in accordance with NYAD's installation procedures and instructions.

Proper Maintenance and Operation- The NYAD equipment must be properly maintained and operated in accordance with NYAD's maintenance and operating procedures. All service parts must be acquired from NYAD or its authorized representative.

No Alteration- The NYAD Equipment must not have been modified or altered from its original conditions at the date of delivery or installation.

Failure to comply with any of these conditions will void this Warranty

RETURN POLICY

Before returning any items (except for recalibration service and repairs) you must call 925 270-3971 8:30 a.m. – 5:00 p.m. PST. Monday through Friday for approval.

Product may be returned for a full refund/credit within 30 days from the date that NYAD originally shipped and must be returned in its original new condition. Exceptions for special order. Returns for special orders will have a 30% restocking fee and must be approved.

Items returned in damaged or altered conditions which cannot be resold as new will have a minimum 30% restocking fee.

All returned items are subject to inspection for use and damage before credit is issued. Returns may incur additional charges if product is returned in damaged condition.

Manufacture Warranty/Defective Claims - You may return product to us for rework, exchange and/or request a full refund/credit. Request must be made from the original purchaser. Upon receipt of a returned item, NYAD will evaluate and determine the warranty claim.

Damaged Items – It is your responsibility to inspect your packages for damages/defect on delivery. If product is damaged in transit to you, we must be notified immediately (within 24 hours) so that we can submit a claim to our freight carrier.

Lost Packages – Lost Packages must be reported within 10 days of shipment date and verification from the freight carrier that product has not been delivered.

Please contact or email us for further important instructions on filing a lost or damaged package claim

TECHNICAL SUPPORT

NYAD Inc. will offer Technical Support via telephone or email. All technical support shall be related to NYAD Equipment only. Any other technical issues involving other products and services to NYAD equipment will not be the responsibility of NYAD Inc.; however, our technical support team will offer their best knowledge and support involved in NYAD equipment.

Warranty/Technical Support:

Ph (925) 270-3971

Contact: Carissa Harrild

Email: sales@nyad.com

www.nyad.com