



SERIES 201T

OXYGEN ANALYZER

OPERATION MANUAL



INDEX

SECTION	PAGE
1. About Nyad Oxygen Analyzer.....	3
2. Installation.....	3
3. The Sensor.....	3
4. The Electronics.....	4
5. Startup Display.....	4
6. Front Panel Controls.....	5
7. Activation "MENU".....	6
8. Silencing Audible Alarm.....	7
9. Setting Alarm Points.....	7
10. Setting Analog and Digital Outputs.....	9
11. Default Values.....	10
12. Reference Menu.....	10
13. Cal Maint "One Touch Cal" Calibration Procedure...	11
14. Replacing The Oxygen Sensor.....	12
15. "Service" Oxygen Sensor Replacement.....	13

1. ABOUT NYAD OXYGEN ANALYZER

Your O₂ analyzer is a self-contained unit capable of measuring the concentration of Oxygen. The range is 0-25% O₂. The O₂ analyzer features two adjustable alarm contacts.

- Analog or digital (optional) signals with adjustable zero and span values and in addition to these features, a “One Touch Cal” auto-calibration function.

2. INSTALLATION

How to Install your O₂ Analyzer into service:

- a) Connect a regulated source of sample air to the 1/8” FNPT connection on the bottom of the enclosure labeled “INLET”. The inlet pressure should be between 15-20 psig. The recommended sample flow rate should be between .4 and .8 SCFH. Refer to the flowmeter on the front panel.
- b) Connect the instrument to a power source;
120/220 VAC 50/60 Hz, or 12VDC in some units.
- c) Turn the POWER switch to ON.
 - Note: Model OA-221T does not have a power switch.
- d) The O₂ analyzer will cycle through its diagnostic routine followed by current O₂ concentration value. The analyzer has been factory calibrated but a “bump” test should be performed to ensure accuracy.

3. THE SENSOR

The O₂ sensor is an electrochemical cell which has a life expectancy of about 2 years. Since the cell is an electrochemical device which is self-depleting, the cell output will gradually decrease as it is used.

LIFE EXPECTANCY:

APPROXIMATELY 6 MONTHS IN CONTAINER

APPROXIMATELY 2 YEARS IN AIR

RECOMMENDED REPLACEMENT INTERVAL EVERY 2 YEARS

4. THE ELECTRONICS

The electronics section of the NYAD Series 201T Oxygen Analyzer is microprocessor based. The NYAD O₂ sensor produces a millivolt output. The signal enters the receiver section of the main electronic board which then shapes and amplifies the incoming signal and directs it to the microprocessor. The signal is amplified and converted to engineering units using memory-resident tables containing the relationship between signal and engineering units. The end product of this electronic process is displayed in percent oxygen.

At this point, the processor performs three functions:

- 1) Allows for the two adjustable alarm contacts (SPDT relays).
- 2) Analog or Digital output signals.
- 3) Displays the measured values on a 4-digit LCD display.

Nyad offers two analog outputs:

- 0-5 volt DC or a
- 4-20mA current output.

Other analog and digital outputs are available and can be factory set as 0-1VDC, RS232 or RS485. The zero point and span of these outputs are adjustable in the software.

5. STARTUP DISPLAY

After the analyzer has been installed, all electrical connections have been made and power turned on, the instrument will proceed through its power-up routine with the display and indicators stepping through the following sequence:


- a) Displays all segments ON and all LED indicators ON for one second. This step verifies the operation of those devices.
- b) Displays the word NYAD for one second.
- c) The display indicates the version of the current operating system software.
 - All LED indicators are off followed by INT and O₂.

The last step in the startup routine is the display of the current O₂ value.

In approximately six seconds, any alarm conditions will be shown on AL1 and/or AL2 red LED alarm indicator and the audible alarm will sound.

6. FRONT PANEL CONTROLS

The NYAD Series 201T O₂ Analyzers have three control buttons located on the front panel that allows the operator to interact with the instrument.

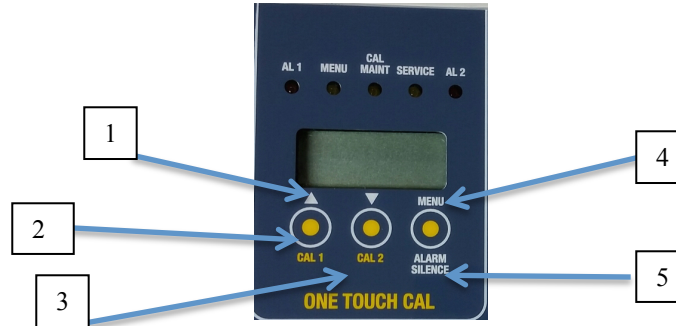

1) UP Arrow and DOWN Arrow Button -

- a) Changes the value of set point, outputs, and constants.
- b) Changes the calibration values.
- c) Changes toggle function “Hi and Lo”

2) **CAL 1** - This button is used during “One Touch Cal” calibration process using Air or sample gas.


3) **CAL 2** - This button is used during “One Touch Cal” calibration process using Air or sample gas. CAL 2 will only be used on units that have been programmed with 2 point calibration.

4) **MENU** - Pressing the MENU button allows the operator to view the current settings.

Pressing and holding the MENU button allows the operator to have access, interrogate, and reset the other major functions incorporated into this analyzer, namely, Alarm 1 and 2, Outputs, Toggles, Factory Codes and Calibration settings.

5) **ALARM SILENCE**– This button is used to temporarily silence the audible alarm. The audible alarm will automatically reactivate in 10 minutes.

LED INDICATORS

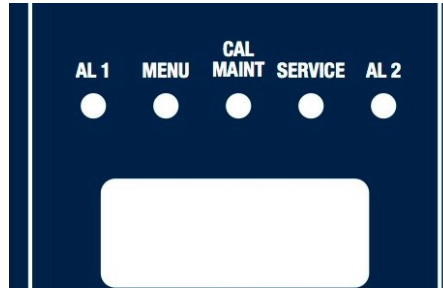

AL1 Red LED Alarm 1 indicator will illuminate indicating the O₂ value has exceeded Alarm 1 set-point value.

MENU Yellow LED indicator

- Solid Yellow - MENU disabled. Available for viewing current settings only.
- Slow Blinking Yellow - “ONE TOUCH CAL” enabled. User in calibration mode.
- Fast Blinking Yellow - MENU enabled. User access available.

CAL MAINT Yellow LED indicator will illuminate indicating Calibration is required.

SERVICE Yellow LED indicator will illuminate indicating O₂ sensor replacement is required.

AL2 Red LED Alarm 2 indicator will illuminate indicating the O₂ value has exceeded Alarm 2 set-point value.

FLOWMETER

Nyad model OA-201T is equipped with a flowmeter which allows the user to visually see the rate of flow in SCFH.

- Recommended flow rate is between .4 to .8 SCFH.

7. ACTIVATION MENU

In normal operations, the MENU button is disabled. The user will only be able to view the current settings set by the factory. **To change factory settings such as Alarm 1 and Alarm 2 set-points, Outputs Hi and Lo, the “MENU” must be activated by a Certified Technician.**

To activate the “MENU”

1) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the DOWN arrow button to change the value to 135.

2) Press the MENU button to the desired location and use the UP arrow or DOWN arrow button to change settings.

Note: Once changes are made, the display will automatically default in about 10 seconds, flash "O₂" and return to the current measure O₂ value. Also, once you scroll through the entire menu, the display will automatically default and return to nor-mal operations).

8. SILENCING AUDIBLE ALARM

To silence the audible alarm, press the "ALARM SILENCE" button once. The audible alarm will be temporarily disabled and will automatically reactivate in 10 minutes.

9. SETTING ALARM POINTS

This analyzer has two adjustable alarm set points and relays as factory standard. When the measured value of O₂ concentration exceeds the set point for a sustained period of about 6 seconds, the alarm condition will become activated. The SPDT relay (Alarm 1) is energized as is the red front-panel LED indicator, AI1.

To determine the current setting for ALARM 1, press the MENU button. The display will show AL1 and then default to the current value. If this value is acceptable, the display will automatically default in about 10 seconds and flash-"O₂" and return to the current measured O₂ value.

To change ALARM 1 (AL 1) set-point the "MENU" must be activated by a Certified Technician as described in Section 7. *"Activation Menu"*

- a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the DOWN arrow button to change the value to 135.
- b) Press the MENU button, AL 1 will momentary display followed by the current Alarm 1 set-point value. Press the UP arrow or DOWN arrow to change Alarm 1 value.

To change ALARM 2 (AL 2) set-point, proceed exactly as described above after pressing the MENU button to display AL2 and its current value.

If the measured value of O₂ concentration is higher than the ALARM 1 or ALARM 2 settings, the corresponding LED will illuminate above the display and energize the alarm relay thus activating any warning devices connected to it.

Alarm Toggle Function

Nyad Series 201T Analyzers are equipped with a toggle function (A1 1t and A2 2t). Set these “Hi” when detecting increasing O₂ and “Lo” when detecting decreasing O₂.

- To

Factory Defaults	
AL 1t	Hi
Al 2t	Hi

view the current setting for AL 1t, press the MENU

button two times.

- The display will show AL1t followed by Hi or Lo.
- Press the MENU button two more times, AL2t will be displayed followed by Hi or Lo.
- If these settings are acceptable, the display will automatically default in about 10 seconds, flash “O₂” and return to the current measured O₂ value.

***To change the settings for AL1t or AL2t, the “MENU” must be activated by a Certified Technician as described in Section 7**

- Press and hold the MENU button for about 10 seconds until CODE is displayed.
 - The MENU LED will begin to blink fast. Press the DOWN arrow button to change the value to 135.
- Press the MENU button two times, “AL1t” will be displayed followed by Hi or Lo. Press the UP or DOWN arrow button to change settings.
- Press the MENU button two more times “AL2t” will be displayed followed by Hi or Lo. Press the UP or DOWN arrow button to change settings. Press the MENU six times.

The display will default back to the current measured O₂ value or in about 10 seconds, the display will automatically default, flash “O₂” and return to the current measured O₂ value.

10. SETTING ANALOG AND DIGITAL OUTPUTS

The NYAD Series 201T Analyzers features a 0-5 VDC and 4-20mA analog output as factory standard. This signal is linearly proportional to ppm O₂. To view the current output settings:

a) Press the MENU button five times. “oPHi” will be displayed. The display will then show the O₂ concentration (20.9% default) corresponding to the Hi end (5 VDC) of the analog output scale.

b) Press the MENU button more one time, the display will now read “oPLo” and then show the O₂ concentration (0% default) corresponding to the Lo end (0 VDC) of the analog output scale.

To change span values from those set at the factory, the “MENU” must be activated by a Certified Technician as described in Section 7. “Activation Menu”.

a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the DOWN arrow button to change the value to 135.

- **Digital Output**

The Series 201T Analyzers features an optional digital output port. The user has a choice of format, either RS-232 or RS-485.

The RS-232 option can be accessed from a standard DB-9 connector located on the bottom of the enclosure or rear panel.



The RS-485 option uses a 25' 3 wire cable Red, Green, Black.

A = Red

B= Green

Ground = Black

To activate the digital output, the “MENU” must be activated by a *Certified Technician* as described in Section 7.

Activating RS232:

- a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the UP arrow button to change the value to 159.
- b) Press the MENU button nine times. The display will show PORT. Press the UP or DOWN arrow and select 0232 (RS232) or 0485 (RS4850). Press the MENU seven times. The display will default back to the current measured O₂ value or in about 10 seconds, the display will automatically default, flash "O₂" and return to the current measured O₂ value.

The digital output is now activated and a constant data stream will be sent every second with the following information:

Data Output format:

\$UNITS, Display_data, Output, ALARM1, ALARM2,
ERROR#1, Line_checksum<CR><LF>

Example: \$CO, 1.4, 0.238, 0, 0, 0, 1177<CR><LF>

11. DEFAULT VALUES

Series 201T Analyzers are preset at the factory with the following standard values:

- **Function %O₂**
- AI 1 17
- AI 2 23
- Output (oPHi) 50
- Output (oPLo) 00

These settings can be changed to values most suitable for your application.

12. REFERENCE MENU

AL 1	Dry Relay Contact - Alarm 1
AL 2	Dry Relay Contact - Alarm 2
A1 1t	Toggle Alarm 1 "Hi or Lo"
A2 2t	Toggle Alarm 2 "Hi or Lo"
oPHi	Analog Output "Hi"
oPLo	Analog Output "Lo"
CAL 1	Calibration using Air
CAL 2	Not Used Unless 2 Point Calibration Required
CAL	"One Touch Cal" Calibration Mode
No CO	Sensor not detecting O ₂
EroP	Operator Error

13. CAL MAINTENANCE - “One Touch Cal”

CALIBRATION PROCEDURE

Calibration interval should be carried out once a month and can be performed by a non-certified technician. The “Cal Maintenance” LED will illuminate indicating calibration is required.

The procedure described here is for calibrating the O₂ sensor with a span gas of known O₂ concentration – For Example: Air @ 20.9%. To calibrate the O₂ sensor, A CERTIFIED SAMPLE OR AIR can be used. A cylinder of certified calibration gas can be purchased from your specialty gas supplier. The span gas should be specified as to the O₂ concentration and to the carrier or balance of the gas.

To begin the “One Touch Cal” calibration process:

- 1) Turn sample air off.
- 2) Attach the span gas to the Calibration Port. If using a gauge, start the flow rate between 200 and 500 cc/min.
(Refer to the gauge on the gas cylinder and not the flow meter on the analyzer). Allow the displayed O₂ value to stabilize to a constant value.

If a gauge is not being used, the flowmeter on the panel can be referenced. Turn on the flow and adjust until the flowmeter shows between .4 and .8 SCFH/

- 3) To activate the “One Touch Cal”, press and hold the MENU button for 5 seconds, “CAL” will momentarily display followed by the current O₂ value.

The MENU LED will start blinking.

- 4) Select “One Touch Cal” CAL 1. The display will show CAL 1 for 20.9%. CAL 2 is only used when the unit has been programmed with 2 point calibration. The MENU LED will stop blinking and the CAL MAINT LED will now turn off.

- 5) Turn off and remove span gas. Allow 5-10 minutes for the O₂ value to return to zero.

To disable “One Touch Cal” while in calibration mode, press and hold the MENU button for 5 seconds. The MENU LED will stop blinking and the analyzer will momentarily default back to the current measured O₂ value.

14. Replacing the O2 Sensor

DANGER

Disconnect power to the unit before performing any maintenance to the control board.

WARNING

The oxygen sensor contains corrosive acid. Do not attempt to open. Before disposing of sensor place it in a polyethylene bag and tie securely. Dispose of sensor in accordance with all applicable regulations.

- 1) Remove the plastic cover (6 captive screws).
- 2) Remove the front panel (two thumb screws).
- 3) Turn the complete sensor module counter clock wise until it is free of the input fitting.
- 4) Remove the electronic board from the assembly by pulling it away from the sensor where it is held by three connector pins. Next remove the sensor from its flow chamber by unscrewing the three small screws holding it in place. Discard the depleted cell and replace it with the new one.
- 5) Reassemble the cell by following the above instructions in reverse.

15. “Service” – O₂ SENSOR REPLACEMENT

The Nyad O₂ sensor should be replaced every **two years** and should be performed by a **Certified Technician**. The “Service” LED will illuminate indicating when the O₂ sensor replacement is required.

After replacing the O₂ sensor, the Service LED indicator must be reset. To reset, the “MENU” must be activated by a Certified Technician as described in Section 7. Activation Menu.

- a) Press and hold the MENU button for about 10 seconds until CODE is displayed. The MENU LED will begin to blink fast. Press the UP arrow button to change the value to 159.
- b) Press the MENU button 10 times, the display will show “SSer”. Press the UP arrow button to change the value to 1.
- c) The “Service” LED will now turn off.
- d) The sensor is now ready for calibration.
 - Refer to Section 13. Calibration Procedure

NOTE:

CALIBRATION IS REQUIRED AFTER REPLACING THE O₂ SENSOR.

Specifications	
Model Numbers	OA-221T (OEM), OA-231T (Rack Mount), OA-241T (Panel Mount), OA-251T, (Nema 4), OA-271T (Nema-7X)
Units	PPM (Parts Per Million)
Standard	Display Backlit 4 Digit LCD, 0.5" High Alarm Dual Dry Relay Contacts (SPDT 1A@120V) Analog Output 0-5VDC or 4-20mA (Adjustable zero and span) Power 120/220VAC 50/60 Hz, 1W Max Memory Non-Volatile Data Memory Inlet 1/8" FNPT Calibration "One Touch Cal" Auto Calibration Audible Alarm 95 db, frequency 2700 to 3700 Hz Mini-Rate Flowmeter 0-1.0 SCFH
Options	Digital Output RS232, RS485 Power 12V
Sensor	
Minimum Range Maximum Range Signal Output Response Time Accuracy Full Scale Drift % Signal/Year Linearity Repeatability Temperature Coefficient Operation Temperature Pressure Humidity Expected Life Storage Temperature Recommended Storage Warranty	-1% O ₂ 0-25% O ₂ 4-20mA <15 seconds @ 20°C ± .1 vol O ₂ <5% ± .1%0 ±0.5 Compensated -20°C to +50 °C 15 psi 0-99%RH 24 Months 0 to 20 °C 6 Months 12 Months
Enclosures	
OEM NEMA-4 Panel Rack Nema-7X	5.75"Wx6.75"Hx2.4"D 9.5"W x 6.25"H x 3.5"D 10"W x 5.25"H x 6"D 19"W x 5.25"H x 6"D 8.37"Wx9.87"Wx6.53"D

Troubleshooting Guide	
Symptoms	Remedy
ELECTRONICS Unit will not cycle Startup routine not normal Display is blank with power on Display has missing segments	Please contact NYAD for verbal evaluation. Unit will likely need to be sent to NYAD for further evaluation.
ERROR CODES ErOp (Error Operator) E-Lo No CO	Output out of range. Set output Lo and Hi. See Section 10 Setting Output. Replace O ₂ sensor or O ₂ round electronics. Sensor not detecting O ₂ Gas. Make sure all connections are secure. Replace O ₂ sensor

Warranty

WARRANTY TERMS

Nyad, Inc. warrants to the original purchaser that all parts used in the construction or fabrication of the Nyad Equipment will be free from defects in materials and factory workmanship, under normal use and service for **five years** from the date of delivery.

Warranty coverage provides the necessary repairs or parts replacement found by Nyad, Inc. to be defective due to bad workmanship or faulty materials.

LIMITATIONS OF WARRANTY

Nyad Equipment is restricted to inspection (FOB the Factory) before warranty is determined, unless other arrangements have been made by Nyad and the original purchaser. This warranty does not apply to routine service/maintenance, calibrations, repairs and replacement of the carbon monoxide sensor every twenty-four (24) months in accordance with manufacturer's recommendation, or replacements made necessary by fire or water damage, or accident to or improper installation by others, alteration, misuse or abuse to the Nyad Equipment. This warranty does not cover labor charges or cost incurred for time and expense by other service agencies or personnel involved in maintaining the Nyad Equipment.

Application of this Warranty is further conditioned upon the following:

- **Installation.** The Nyad Equipment must be properly installed in accordance with Nyad's installation procedures and instructions.
- **Proper Maintenance and Operation.** The Nyad Equipment must be properly maintained and operated in accordance with Nyad's maintenance and operating procedures. All service parts must be acquired from Nyad or its authorized representative.
- **No Alteration.** The Nyad Equipment must not have been modified or altered from its original conditions at the date of delivery or installation.

Failure to comply with any of these conditions will void this Warranty.

RETURN POLICY

Before returning any items (except for recalibration service and repairs) you must call: 925.270-3971

- 8:30 a.m. – 5:00 p.m. PST. Monday through Friday for approval.

Exceptions for special order.

Returns for special orders will have 30% restocking fee and must be approved.

- Items returned in damaged or altered conditions which cannot be resold as new will not be accepted for return.
- All returned items are subject to inspection for use and damage before credit is issued.

Manufacture Warranty/Defective Claims –

You may return product to us for rework, exchange and/or request a full refund/credit.

- Request must be made from the original purchaser.
- Upon receipt of a returned item, Nyad will evaluate and determine the warranty claim.

Damaged Items –

It is the responsibility of the original purchaser to inspect the packages for damages/defect upon receipt of goods.

- If product is damaged in transit to you, Nyad must be notified immediately (within 24 hours) so that Nyad can submit a claim to our freight carrier.

Lost Packages –

Lost Packages must be reported within 30 days of shipment date and verification from the freight carrier that product has not been delivered. Nyad does not insure packages unless requested by the customer.

- Please contact or email us for further important instructions on filing a lost or damaged package claim.

TECHNICAL SUPPORT

Nyad, Inc. will offer Technical Support via telephone or email. All technical support shall be related to the Nyad Equipment only. Any other technical issues involving other products and services to the Nyad Equipment will not be the responsibility of Nyad, Inc.

Warranty/Technical Support:

Phone: (925) 270-3971
Contact: sales@nyad.com

NFPA COMPLIANT

- **The Nyad Oxygen Analyzers meet or exceed CGA Grade-D specifications for air quality as adopted by Federal OSHA.**
- **The Nyad Oxygen Analyzers' quality standards meet or exceed OSHA 1910.134 requirements.**
- **When the components are used in accordance with the manufacturer's instructions and recommendations, the "analyzer" meets or exceeds federal regulations presently in force.**
- **The Nyad Oxygen Analyzer shall be calibrated monthly and the Oxygen Sensor shall be replaced every 2 years for accuracy in accordance to the manufactures recommendation.**

- 1) OSHA REGULATIONS (Standard-29 CFR)
Respiratory Protection 1910.134 1910.134(i)(1)(ii)(C)**
- 2) Oxygen (O₂) content of at least 19.5%.**

Nyad Oxygen Analyzer detection range is 0-25% and is equipped with alarms when safe levels are exceeded.